SAFETY MANUAL



SH 3967 EN

Translation of original instructions



Type 3967 Solenoid Valve



Definition of signal words

▲ DANGER

Hazardous situations which, if not avoided, will result in death or serious injury

▲ WARNING

Hazardous situations which, if not avoided, could result in death or serious injury

• NOTICE

Property damage message or malfunction

i Note

Additional information



Recommended action

Purpose of this manual

The Safety Manual SH 3967 contains information relevant to the use of the Type 3967 Solenoid Valve in safety-instrumented systems according to IEC 61508 and IEC 61511. The safety manual is intended for planners, constructors and operators of safety-instrumented systems

• NOTICE

Risk of malfunction due to incorrect mounting, connection or start-up of the device.

- → Refer to Mounting and Operating Instructions EB 3967 for details on how to mount the device, perform the electric and pneumatic connections as well as start up the device.
- Observe the warnings and safety instructions written in the Mounting and Operating Instructions EB 3967.

Further documentation

The documents listed below contain descriptions of the start-up, functioning and operation of the solenoid valve. You can download these documents from the SAMSON website.

► T 3967: Data sheet

► EB 3967: Mounting and operating instructions



In addition to the solenoid valve documentation, observe the documentation for the pneumatic actuator, valve and other valve accessories.

Contents

1	Scope	5
1.1	General	
	Operation with restrictor plate (solenoid valve version with K _{VS} 0.32)	
1.2	Use in safety-instrumented systems	
1.3	Versions and ordering data	5
	Article code	6
2	Mounting	9
3	Technical data	10
4	Safety-related functions	14
	Emergency venting	
4.1	Fail-safe action	
5	Mounting, connection and start-up	16
6	Required conditions	17
6.1	Selection	17
6.2	Mechanical and pneumatic installation	18
6.3	Electrical installation	19
7	Proof testing	20
7.1	Visual inspection to avoid systematic failure	20
7.2	Function testing	21
8	Maintenance and repair	22
9	Safety-related data and certificates	23
9.1	Solenoid valve	
9.2	Restrictor plates	23
	Cafee and and down	22
	Safety-related data	Z3

1 Scope

1.1 General

The Type 3967 Solenoid Valve converts binary voltage signals into pneumatic control signals. It is used to control pneumatic rotary and linear actuators with spring-return mechanism.

Operation with restrictor plate (solenoid valve version with K_{VS} 0.32)

The restrictor plate is used in combination with solenoid valve versions with K_{VS} 0.32 to adjust the actuating times of pneumatic actuators. It is suitable for attachment to rotary or linear actuators with spring-return mechanism. The functions of the plates are to restrict the supply air (supply air restrictor) to the actuator, or the exhaust air (exhaust air restrictor) from the actuator, but their safety function is always to ensure the safe exhaust of the actuator.

1.2 Use in safety-instrumented systems

Observing the requirements of IEC 61508, the systematic capability of the solenoid valve for emergency venting as a component in safety-instrumented systems is given.

Use of the solenoid valve is possible on observing the requirements of IEC 61511 and the required hardware fault tolerance in safety-instrumented systems up to SIL 2 (single device/HFT = 0) and SIL 3 (redundant configuration/HFT = 1).

The individual safety-instrumented functions of the solenoid valve are to be regarded as Type A elements in accordance with IEC 61508-2.

Operation with restrictor plate (solenoid valve version with K_{VS} 0.32)

The use of the SIL restrictor plate with supply or exhaust air restrictor is possible on observing the requirements of IEC 61511 and the required hardware fault tolerance in safety-instrumented systems up to SIL 2 (single device/HFT = 0).

The individual safety-instrumented functions of the restrictor plate are to be regarded as Type A elements in accordance with IEC 61508-2.

1.3 Versions and ordering data

All versions of the solenoid valve marked with the prefix **SIL** are suitable for use in safety-instrumented systems. The article code written on the nameplate (see article code on page 6) provides details on the optional equipment of the solenoid valve.

Operation with restrictor plate (solenoid valve version with K_{vs} 0.32)

Only restrictor plates marked with **SIL** must be used in safety-instrumented systems. The construction of these restrictor plates ensures that the cross-sectional area of flow cannot be completely closed.

Article code

Solenoid valve	Т	уре 3967-	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х
Type of protecti	on		Т	Т	Т	Τ	Τ	T	T	Т	T		П	Т	T	Т	Т	Т				П	П
Without explosi	on protection	SIL	0	0	0																		
ATEX	II 2G Ex ia IIC T6 Gb, II 2D Ex ia IIIC T80°C Db	SIL	1	1	0																		
NEPSI	Ex ia IIC T4~T6 Gb, Ex iaD 21 T80	SIL																					
IECEx	Ex ia IIC T6T4 Gb, Ex ia IIIC T80 °C Db	JIL				- 1																	
EAC	1Ex ia IIC T6T4 Gb, Ex ia IIIC T80 °C Db	SIL	1	1	3																		
TR CMU 1055	II 2G Ex ia IIC T6T4 G II 2D Ex ia IIIC T80 °C D	b, SIL	1	1	6																		
ATEX	II 3G Ex nA II T6, II 3G Ex ic IIC T6, II 3D Ex to IIIC T80°C IPA																						
	Ex nA II T6, Ex nL IIC T6 Ex tD A22 IP65 T80°C	' SIL	8	1	2																		
EAC	2Ex nA IIC T6T4 Gc X, 2Ex ic IIC T6T4 Gc, Ex tc IIIC T80 °C Dc		8	1	3																		
TR CMU 1055	II 3G Ex nA II T6 Gc,	SIL																					
Nominal signal																							
6 V DC					SIL	1																	
12 V DC					SIL	2																	
24 V DC					SIL	3			1	\perp	_					\perp							\perp
Manual override																							
Pushbutton underneath the enclosure cover						SIL	-																
Without							3		1	_	_				_	1	_	_					\perp
Switching functi																							
3/2-way function	on with spring-return mecl	hanism					SIL	0	0														

Solenoid valve	Туре 3967- х х х х х	ххх	хх	X	х	х	х	х	х	х	х	х	х	y
Mounting					T	Τ	T	T	T	Т	Т	T	Т	
NAMUR interface 1/4" according ators	to VDI/VDE 3845 for rotary actu-	SIL 0												
NAMUR rib according to IEC 60. panel, wall or rail mounting	534-6-1 for linear actuators or	SIL 2												
•	or SAMSON Type 3277 Pneumatic	SIL 3												
	to VDI/VDE 3845 for rotary actu-	SIL 4												
ators					\perp	\perp	1	4	4	4	\perp	_	4	
K _{VS} 1)														
0.32		SIL												
2.0		SIL	2											
4.3		SIL	4	\perp	\perp	\perp	\perp	\perp	1	\perp	┸			_
Material														
Polyamide and powder-coated a	luminum		SIL 1											
Polyamide and stainless steel			SIL 2	2	\perp	\perp	\perp	\perp	\perp	\perp	┸			
Pneumatic connection														
Two blanking plugs (connection t	o the adapter plate or on mounting	block)	SI	L 0										
G 1/4			SI	L 1										
¼ NPT			SI	L 2										
G 1/2			SI	L 3										
½ NPT			SI	L 4		╧								
Pilot valve connection														
Two blanking plugs (connection of block)	on the adapter plate, booster valve	or mounti	ng	SIL	0									
One G ¼ or ¼ NPT (with interno	al pilot supply)			SIL	1									
Two G ¼ or ¼ NPT (with externo	ıl pilot supply)			SIL	2									
Without (with dummy plate – con mounting block)	nnection on the adapter plate, boos	ter valve o	or	SIL	4									
Supply air						T								
Internal supply over port 1 (for a	ctuators for on/off service)				SIL	0								
External supply over port 9 (for a with positioner)	actuators for throttling service or mo	ounting blo	ock		SIL	1								
Electrical connection														
Without cable gland						SIL	0	0						
M16x1.5 cable gland made of b	lack polyamide					SIL	0	1						
M16x1.5 cable gland, blue polye	amide					SIL	1	1						
M16x1.5 cable gland (CEAG), b	lack polyamide					SIL	1	3						
M16x1.5 cable gland, nickel-pla	ted brass					SIL	1	4						
M16x1.5 cable gland, brass, blu	e				_ :	SIL	1	5						
Degree of protection									T		T			

Solenoid valve	Туре 3967-	х	х	x z	()	хх	X	х	х	х	х	х	х	х	х	х	х	х	х	х	х
Ambient temperature 2)																					
-20 to +80 °C																SIL	0				
-45 to +80 °C																SIL	1	İ		ĺ	
Safety-instrumented function																					
SIL 3) and PL																	SIL	. 1			
Special version																					
Without																		SIL	. 0	0	0

- The air flow rate when $p_1=2.4$ bar and $p_2=1.0$ bar is calculated using the following formula: $Q=KVS \times 36.22$ in m^3/h .
- 21 The maximum permissible ambient temperature depends on the permissible ambient temperature of the cable gland, type of protection and temperature class.
- 3) SIL according to IEC 61508 (see Chapter 9)

Restrictor plates suitable for SIL applications

Accessories fo	r K _{vs} 0.32
Order no.	Designation
100200805	With fine exhaust air restrictor and safety plate, K_{VS} 0.002 to 0.27, adjustable; made of aluminum with Ematal coating SIL
100200795	With exhaust air restrictor and lock nut, K_{VS} 0.01 to 0.28, adjustable; made of aluminum with Ematal coating SIL
100200797	With exhaust air restrictor and lock nut, K_{VS} 0.01 to 0.28, adjustable; made of stainless steel 1.4404 SIL
100200807	With fine supply air restrictor and safety plate, K_{VS} 0.002 to 0.27, adjustable; made of aluminum with Ematal coating SIL
100200791	With supply air restrictor and lock nut, K_{VS} 0.01 to 0.28, adjustable; made of aluminum with Ematal coating SIL
100200793	With supply air restrictor and lock nut, K_{VS} 0.01 to 0.28, adjustable; made of stainless steel 1.4404 SIL
100200799	With double exhaust air restrictor and lock nut, K_{VS} 0.01 to 0.28, adjustable; made of aluminum with Ematal coating SIL
100200801	With double exhaust air restrictor for double-acting actuators and lock nut, K_{VS} 0.01 to 0.28, adjustable; made of stainless steel 1.4404 SIL
100200802	With supply air restrictor, turnable by 180° , for double-acting actuators and lock nut, K_{VS} 0.01 to 0.28, adjustable; made of aluminum with Ematal coating SIL
100200803	With supply air restrictor, turnable by 180° , for double-acting actuators and lock nut, K_{VS} 0.01 to 0.28, adjustable; made of stainless steel 1.4404 SIL

2 Mounting

The solenoid valve is suitable for the following types of attachment in combination with various mounting parts:

- Attachment to rotary actuators with NAMUR interface according to VDI/VDE 3845
- Attachment to linear actuators with NAMUR rib according to IEC 60534-6-1
- Direct attachment to SAMSON Type 3277 Linear Actuator using connection block
- Pipe mounting
- Panel, wall or rail mounting

3 Technical data

Type 3967-xxxxxxxx0 Solenoid Valve (K _{VS} 0.32) 1)									
Switching function	3/2-way function	with exhaust air feedback, actuated on one side							
K _{VS} ²⁾	0.32								
Safety-instrumented function	SIL 3) and PL								
Design	Solenoid with flap	per/nozzle assembly and plug/seat valve with return spring							
Material	Enclosure:	Black polyamide							
	Connecting plate:	Aluminum, powder coated, black or stainless steel 1.4404							
	Adapter plate:	Aluminum, powder coated, gray beige RAL 1019 or stainless steel 1.4404							
	Screws:	Stainless steel A2-70							
	Springs:	Stainless steel 1.4310							
	Seals:	Silicone rubber							
Supply air	Instrument air (free from corrosive substances) or nitrogen								
Pilot supply pressure	1.4 to 10.0 bar ⁴), 1.4 to 6.0 bar ⁵) (with 0 to 6.0 bar operating pressure) ⁵), 1.9 to 10.0 bar ⁴) (with 0 to 10.0 bar operating pressure) ⁵)								
Operating medium		e from corrosive substances) or nitrogen ⁴), e from corrosive substances), air containing oil or non-corrosive gas-							
Compressed air quality according to ISO 8573-1		ensity: Class $4\cdot$ Oil content: Class $3\cdot$ Pressure dew point: Class 3 or $^{\prime\prime}$ the lowest ambient temperature to be expected							
Operating pressure	1.4 to 10.0 bar 3),	max. 10.0 bar ⁵⁾							
Output signal	Operating pressur	e							
Air consumption (binary e/p converter)		r pilot air in operating position, r pilot air in neutral position							
Switching time	65 ms								
Electrical connection	Screw terminal, 2-	pole, with cable gland M16x1.5							
Pneumatic connection	G ¼ or ¼ NPT an	d NAMUR interface 1/4" 6)							
Degree of protection	IP 65								
Ambient temperature 7)	-20 to +80 °C; -4	.5 to +80 °C							
Weight	0.45 kg, 0.80 kg	(with adapter plate)							

The solenoid valve version with K_{VS} 0.32 can be fitted with a restrictor plate to adjust the actuating time of the pneumatic actuator.

- 3) SIL according to IEC 61508 (certificate no. V 60.09/14)
- 4) With internal pilot supply
- 5) With external pilot supply
- 6) NAMUR interface according to VDI/VDE 3845
- 7) The maximum permissible ambient temperature depends on the permissible ambient temperature of the cable gland, type of protection and temperature class.

The air flow rate when $p_1 = 2.4$ bar and $p_2 = 1.0$ bar is calculated using the following formula: $Q = KVS \times 36.22$ in m^3/h .

Type 3967-xxxxxxxx2 Solen	oid Valve (K _{VS} 2.0)						
Switching function	3/2-way function	with exhaust air feedback, actuated on one side					
K _{VS} ¹⁾ (in direction of flow)	$2.0 (3 \rightarrow 5), 1.1$	$(4 \rightarrow 3)$					
Safety-instrumented function	SIL ²⁾						
Design	Solenoid with flap	per/nozzle assembly and plug/seat valve with return spring					
Material	Enclosure:	Black polyamide, aluminum, powder coated, gray beige RAL 1019, or stainless steel 1.4404					
	Connecting plate:	Aluminum, powder coated, black or stainless steel 1.4404					
	Adapter plate:	Aluminum, powder coated, gray beige RAL 1019 or stainless steel 1.4404					
	Screws:	Stainless steel A2-70					
	Springs:	Stainless steel 1.4310					
	Seals:	Chloroprene rubber (-20 to +80 °C) or silicone rubber (-45 to +80 °C)					
	Diaphragm:	Chloroprene rubber (-20 to +80 °C) or silicone rubber (-45 to +80 °C)					
Supply air	Instrument air (free	e from corrosive substances) or nitrogen					
Pilot supply pressure	1.4 to 10.0 bar ³⁾ , 1.4 to 6.0 bar ⁴⁾ (with 0 to 6.0 bar operating pressure), 1.9 to 10.0 bar ⁴⁾ (with 0 to 10.0 bar operating pressure)						
Operating medium		e from corrosive substances) or nitrogen ³⁾ , e from corrosive substances), air containing oil or non-corrosive gas-					
Compressed air quality according to ISO 8573-1		lensity: Class $4\cdot$ Oil content: Class $3\cdot$ Pressure dew point: Class 3 or w the lowest ambient temperature to be expected					
Operating pressure	Max. 10.0 bar						
Output signal	Operating pressur	e					
Air consumption (binary e/p converter)		r pilot air in operating position, r pilot air in neutral position					
Switching time	65 ms						
Electrical connection	Screw terminal, 2-	pole, with cable gland M16x1.5					
Pneumatic connection	Supply air: Exhaust air:	G ¼ or ¼ NPT and NAMUR interface ¼" 5) with G % G ½ or ½ NPT and NAMUR interface ¼" 5) with G %					
Degree of protection	IP 65						
Ambient temperature 6)	-20 to +80 °C; -4						
Weight	1.65 kg, 1.95 kg	1.65 kg, 1.95 kg (with adapter plate)					

¹⁾ The air flow rate when $p_1=2.4$ bar and $p_2=1.0$ bar is calculated using the following formula: $Q=KVS\times36.22$ in m^3/h .

²⁾ SIL according to IEC 61508 (certificate no. V 60.09/14)

³⁾ With internal pilot supply

⁴⁾ With external pilot supply

⁵⁾ NAMUR interface according to VDI/VDE 3845

⁶⁾ The maximum permissible ambient temperature depends on the permissible ambient temperature of the cable gland, type of protection and temperature class.

Technical data

Type 3967-xxxxxxxx4 Solen	oid Valve (K _{VS} 4.3)	
Switching function	3/2-way function	with exhaust air feedback, actuated on one side
K _{VS} 1) (in direction of flow)	$4.3 (3 \rightarrow 5), 1.9$	$(4 \rightarrow 3)$
Safety-instrumented function	SIL 2)	
Design	Solenoid with flap	per/nozzle assembly and plug/seat valve with return spring
Material	Enclosure:	Black polyamide, aluminum, powder coated, gray beige RAL 1019, or stainless steel 1.4404
	Connecting plate:	Aluminum, powder coated, black or stainless steel 1.4404
	Adapter plate:	Aluminum, powder coated, gray beige RAL 1019 or stainless steel 1.4404
	Screws:	Stainless steel A2-70
	Springs:	Stainless steel 1.4310
	Seals:	Chloroprene rubber (-20 to +80 °C) or silicone rubber (-45 to +80 °C)
	Diaphragm:	Chloroprene rubber (-20 to +80 °C) or silicone rubber (-45 to +80 °C)
Supply air	Instrument air (free	e from corrosive substances) or nitrogen
Pilot supply pressure		with 0 to 6.0 bar operating pressure) 4],
0 1:	1	(with 0 to 10.0 bar operating pressure) 4)
Operating medium		e from corrosive substances) or nitrogen ³⁾ , e from corrosive substances), air containing oil or non-corrosive gas-
Compressed air quality according to ISO 8573-1		lensity: Class $4\cdot$ Oil content: Class $3\cdot$ Pressure dew point: Class 3 or w the lowest ambient temperature to be expected
Operating pressure	Max. 10.0 bar	
Output signal	Operating pressur	e
Air consumption (binary e/p converter)		r pilot air in operating position, r pilot air in neutral position
Switching time	65 ms	
Electrical connection	Screw terminal, 2-	pole, with cable gland M16x1.5
Pneumatic connection	G ½ or ½ NPT an	d NAMUR interface 1/2" 5)
Degree of protection	IP 65	
Ambient temperature 6)	-20 to +80 °C; -4	5 to +80 °C
Weight	1.6 kg, 1.9 kg (wi	th adapter plate)

 $^{^{1)}}$ The air flow rate when $p_1=2.4$ bar and $p_2=1.0$ bar is calculated using the following formula: $Q=K_{VS}\times 36.22$ in $m^3/h.$

²⁾ SIL according to IEC 61508 (certificate no. V 60.09/14)

³⁾ With internal pilot supply

⁴⁾ With external pilot supply

⁵⁾ NAMUR interface according to VDI/VDE 3845

⁶⁾ The maximum permissible ambient temperature depends on the permissible ambient temperature of the cable gland, type of protection and temperature class.

Electric data				
Туре 3967		-xxx1	-xxx2	-ххх3
Nominal signal	U _N	6 V DC	12 V DC	24 V DC
	U _{max} 1)	27 V	40 V	60 V
Switching On	U _{+80 °C}	≥4.8 V	≥9.6 V	≥18 V
point	P _{+20 °C}	≥5.47 mW	≥13.05 mW	≥26.71 mW
Off		≤1.0 V	≤2.3 V	≤4.6 V
Impedance	R _{+20 °C}	2.6 kΩ	5.3 kΩ	10.5 kΩ
Temperature influer	nce on R	0.4 %/°C	0.2 %/°C	0.1 %/°C
Type of protection	Ex ia IIC ²	/Ex ia IIIC 3)		
Туре 3967		-1101	-1102	-1103
Nominal signal	U _N	6 V DC	12 V DC	24 V DC
See EC type exami intrinsically safe cir		tificate PTB 06 ATEX 2027 for	maximum permissible values	when connected to a certified
Type of protection	Ex nA II 4	/Ex tc IIIC 5)		
Туре 3967		-8101	-8102	-8103
Nominal signal	U _N	6 V DC	12 V DC	24 V DC
See statement of co	nformity I	PTB 06 ATEX 2028 X for maxi	mum permissible values when	connected to a certified in-

Maximum permissible value at 100 % duty cycle. The maximum permissible value U_i applies to explosion-protected versions

trinsically safe circuit.

²⁾ Marking II 2G Ex ia IIC T6 Gb

³⁾ Marking II 2D Ex ia IIIC T80°C Db

⁴⁾ Marking II 3G Ex nA II T6/II 3G Ex ic IIC T6

⁵⁾ Marking II 3D Ex tc IIIC T80°C IP65

4 Safety-related functions

Emergency venting

The solenoid valve is energized by a binary voltage signal. Fail-safe action is triggered when no voltage signal (0 V DC) is applied to terminals + and -. The solenoid valve vents to the atmosphere and the actuator is vented as well (see Fig. 1 on page 15).

Restriction function (operation with restrictor plate for solenoid valve version with K_{VS} 0.32)

The restrictor plate consists of a manually adjustable supply air or exhaust air restrictor and a check valve connected in parallel. Depending on which restrictor version is used, either the supply air or exhaust air of the actuator is restricted.


4.1 Fail-safe action

Fail-safe action is triggered by the solenoid valve and upon supply air failure. The solenoid valve fully discharges its pneumatic output to the atmosphere, causing the mounted actuator to be vented. As a result, the valve moves to the fail-safe position. The fail-safe position depends on how the springs are arranged in the pneumatic actuator (air-to-close or air-to-open).

Restriction function (operation with restrictor plate for solenoid valve version with K_{VS} 0.32)

The restrictor plate is designed to ensure the emergency venting of the actuator on demand (the construction inhibits the blocking of the supply air in the actuator).

The check valve connected in parallel guarantees the emergency venting in the restrictor plate with supply air restrictor. In the restrictor plate with exhaust air restrictor, the restrictor spindle guarantees a minimum air flow and, as a result, prevents blocking. This also applies when the restrictor spindle is fully screwed in.

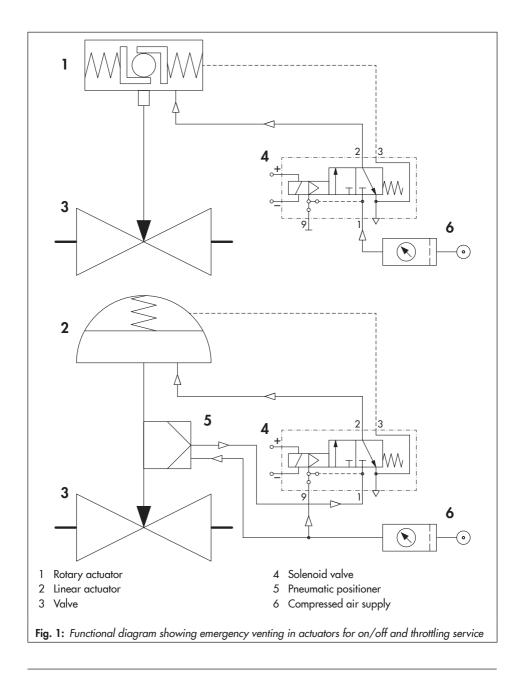

5 Mounting, connection and start-up

Refer to Mounting and Operating Instructions EB 3967 on how to mount the solenoid valve, perform the electric and pneumatic connections as well as start up the solenoid valve. Only use original mounting parts and accessories.

6 Required conditions

A WARNING

Risk of malfunction due to incorrect selection or wrong installation and operating conditions.

→ Only use control valves in safety-instrumented systems if the necessary conditions in the plant are fulfilled. This also applies to the mounted solenoid valve.

6.1 Selection

→ The required transit times of the control valve are observed. The transit times to be implemented are determined by the process engineering requirements.

The solenoid valve version with K_{VS} 0.32 allows the actuating time of the pneumatic actuator to be decreased by operating it with a restrictor plate.

→ The solenoid valve is suitable for the prevailing ambient temperature.

Versions	Temperature range							
With diaphragm and seals made of chloroprene rubber	-20 to +80 °C							
With diaphragm and seals made of silicone rubber	-45 to +80 °C							
With plastic cable gland	-20 to +80 °C							
With metal cable gland	-45 to +80 °C							
The specifications in the test certificates additionally apply to explosion-protected versions.								

- → The temperature limits are observed.
- → A restrictor plate suitable for SIL applications is used when operated with a restrictor plate.

6.2 Mechanical and pneumatic installation

- → The solenoid valve is mounted properly as described in the mounting and operating instructions and connected to the air supply.
- → The maximum supply pressure does not exceed 10.0 bar.
- → The supply air meets the instrument air specifications.

Particle size and quantity	Oil content	Pressure dew point
Class 4	Class 3	Class 3
≤5 µm and 1000/m³	≤1 mg/m³	-20 °C or at least 10 K below the lowest ambient temperature to be expected



We recommend installing a supply pressure regulator/filter upstream of the device. For example, Type 3999-009x Service Unit or Type 3999-0096 Filter Regulator can be used

- → The minimum required cross section of the connecting lines is observed: 4 mm inside diameter for the external pilot supply line (9) and 9 mm inside diameter for the internal pilot supply line (1) and output (2).
 - See "Sizing of the connecting line" in the mounting and operating instructions EB 3967.
- → Select the cross section and length of the line to ensure that the supply pressure at the device on supplying air does not fall below the minimum limit of 1.4 (1.9) bar.
- → The solenoid valve is mounted as prescribed.
- → The exhaust opening at the solenoid valve remains open when the solenoid valve is installed on site.

Operation with restrictor plate (solenoid valve version with K_{VS} 0.32)

→ The restrictor plate is installed properly as described in the mounting and operating instructions

6.3 Electrical installation

- → The solenoid valve is mounted properly as described in the mounting and operating instructions and connected to the electric power supply.
- → Only cables whose outside diameters are suitable for the cable glands are used.
- → The electrical cables in Ex i circuits comply with the data that planning was based on.
- → The cable glands and enclosure cover screws are fastened tightly to ensure that the degree of protection is met.
- → The installation requirements for the applicable explosion protection measures are observed.
- → The special conditions specified in the explosion protection certificates are observed.

7 Proof testing

The proof test interval and the extent of testing lie within the operator's responsibility. The operator must draw up a test plan, in which the proof tests and the interval between them are specified. We recommend summarizing the requirements of the proof test in a checklist.

A WARNING

Risk of dangerous failure due to malfunction in the event of emergency (actuator is not vented or the valve does not move to the fail-safe position).

→ Only use devices in safety-instrumented systems that have passed the proof test according to the test plan drawn up by the operator.

Regularly check the safety-instrumented function of the entire SIS loop. The test intervals are determined, for example on calculating each single SIS loop in a plant (PFD_{ava}).

7.1 Visual inspection to avoid systematic failure

To avoid systematic failure, inspect the solenoid valve regularly. The frequency and the scope of the inspection lie within the operator's responsibility. Take application-specific influences into account, such as:

- Dirt blocking the pneumatic connections
- Corrosion (destruction primarily of metals due to chemical and physical processes)
- Material fatigue
- Aging (damage caused to organic materials, e.g. plastics or elastomers, by exposure to light and heat)
- Chemical attack (organic materials, e.g. plastics or elastomer, which swell, leach out or decompose due to exposure to chemicals)

NOTICE

Risk of malfunction due to the use of unauthorized parts.

→ Only use original parts to replace worn parts.

Operation with restrictor plate (solenoid valve version with K_{VS} 0.32)

→ Check that the lock nut or safety plate is mounted firmly.

7.2 Function testing

Regularly check the safety-instrumented function according to the test plan drawn up by the operator.

Refer to the SIL proof test when large deviations occur or any other irregularities. The necessary documentation for this is provided by SAMSON.

The SIL proof test can be performed by SAMSON on request.

i Note

Record any faults in the device and inform SAMSON of them in writing.

- → For the internal pilot supply, the permissible operating pressure from 1.4 to 10.0 bar must be applied to port 1.
 - In case of external pilot supply, air with the maximum operating pressure of 10.0 bar or the maximum available operating pressure must be applied to port 1. On using an upstream positioner, adjust it so that the maximum output pressure is available at the positioner output.
- → Apply the nominal voltage U_N specified on the nameplate to the solenoid valve.
- → Check whether the valve moves to its end position on demand.
- → De-energize the solenoid valve.

Check whether the actuator is fully vented within the demanded time (fail-safe position).



Connect a pressure gauge to check that the actuator has completely vented.

→ Record the valve transit time and compare it to the time the valve took at start-up and during proof tests.

Proof test

A full stroke test must be performed as the proof test. The following value can be used for Proof Test Coverage to calculate PFD_{avg} :

PTC (Proof Test Coverage) = 95% for a proof test

8 Maintenance and repair

Only perform the work on the solenoid valve described in EB 3967.

Only use the specified original mounting parts.

NOTICE

Safety-instrumented function will be impaired if repair work is performed incorrectly.

→ Only allow trained staff to perform service and repair work.

For devices operated in the low demand mode, a useful lifetime of 11 years (plus 1.5 years storage time) is confirmed by TÜV Rheinland® from the date of manufacture while taking into account the specific conditions of use specified in the Safety Manual and the Mounting and Operating Instructions.

The results of the proof test must be assessed and the maintenance scheduled based on it. In particular, after changes (e.g. signs of aging in elastomers, changed switching times or leakage etc.), it is essential that the manufacturer performs maintenance or repair work on the device.

MTC (Maintenance Coverage) > 99 %

9 Safety-related data and certificates

9.1 Solenoid valve

The safety-related data for the solenoid valve are listed in the following certificate.

9.2 Restrictor plates

The restrictor plates are suitable for use in a safety-instrumented system up to SIL 2 (low demand mode). The use of the restrictor plates has been assessed with a maximum safety integrity level of 2 (SC2).

Safety-related data

λ _{dangerous, undetected}	78 FIT					
DC (Diagnostic Coverage)	0 %					
T ₁ (assumed proof test interval)	1 year					

1 FIT = 1 failure per 10^9 hours

The specified values require periodic testing and maintenance. The operator is responsible for taking into account external conditions (e.g. ensuring the required quality of the media, maximum temperature, exposure time) and suitable test cycles.

The specified failure rate for the low demand mode is the result of an FMEDA. The specified failure rate does not release the end user from collecting and evaluating application-specific reliability data.





SIL/PL Capability

No.: 968/V 1160.02/21

Product tested

Electromagnetic control, solenoid, booster valves and electrical position feedback Certificate holder SAMSON AG Weismüllerstr. 3 60314 Frankfurt / Main

Germany

Type designation

3963, 3967, 3964, 3756, 3701, 3968,

3776 (with option solenoid valve as well as safe indication of end positions)

Codes and standards

IEC 61508 Parts 1-2 and 4-7:2010

Intended application

Safety Function: Safe venting (and safe indication of end positions)

The test items are suitable for use in a safety instrumented system up to

SIL 2 (low demand mode).

Under consideration of the minimum required hardware fault tolerance HFT = 1 the valves may be used in a redundant architecture up to SIL 3 according to IEC 61508 and IEC 61511-1:2016 + AMD1:2017.

Specific requirements

The instructions of the associated Installation, Operating and Safety

Manual shall be considered.

Summary of test results see back side of this certificate.

The issue of this certificate is based upon an evaluation in accordance with the Certification Program CERT FSP1 V1.0:2017 in its actual version, whose results are documented in Report No. 968V 1160.02/21 dated 2021-09-08. This certificate is valid only for products, which are identical with the product tested.

TÜV Rheinland Industrie Service GmbH

Bereich Automation Funktionale Sicherheit

Köln, 2021-09-13

Certification Boilly Sufery & Security for Automation & Grid

Dipl.-Ing. (FH) Wolf Rückwart

www.fs-products.com www.tuv.com



10/22212 12EA4 @ TÜV, TUEV and TUV are registered trademarks. Uliteation and application requires prior approva

TDV Rheinland Industrie Service GmbH, Am Grauen Stein, 51:105 Koh / Germany Tal: +49.221 806-1790, Fox: +49.221 806-1639, EMalt Industrie-service@de.bv.<



Holder: SAMSON AG

Weismüllerstraße 3 60314 Frankfurt am Main

Germany

Product tested: Electromagnetic control, solenoid and booster

valves of the types

3963, 3967, 3964, 3756, 3701, 3968 4,

3776 (with option "solenoid valve" as well as "safe

indication of end positions")

Results of Assessment

Route of Assessment	2 _H / 1 ₈
Type of Sub-system	Type A
Mode of Operation	Low Demand Mode

Safe venting - Type 3701 3963 3967 3776 (with option solenoid valve)

Hardware Fault Tolerance	HFT	0	
Lambda Dangerous Undetected 1	λ _{DU}	8.02 E-08 / h	80 FIT
Average Probability of Failure on Demand ²	PFD _{avg} (T ₁)	3.51 E-04	

Safe indication of end positions - Type 3776 (only with inductive proximity switches)

Hardware Fault Tolerance	HFT	0	
Lambda Dangerous Undetected ¹	λ _{DU}	7.35 E-08 / h	74 FIT
Average Probability of Failure on Demand ²	PFD _{avg} (T ₁)	3.22 E-04	

Safe venting - Type 3756

oale venting - Type or oo			
Hardware Fault Tolerance	HFT	0 (1 as variant, see report)	
Lambda Dangerous Undetected ¹	λ _{DU}	8.38 E-08 / h	84 FIT
Average Probability of Failure on Demand ²	PFD _{avg} (T ₁)	3.67 E-04	
Average Probability of Failure on Demand 1002 3	PFD _{avg} (T ₁)	3.69 E-05	

Safe venting - Type 3964 pilot valve

Hardware Fault Tolerance	HFT	0	
Lambda Dangerous Undetected 1	λ _{DU}	5.12 E-09 / h	5 FIT
Average Probability of Failure on Demand 2	PFD _{avg} (T ₁)	2.24 E-05	

¹ assumed Diagnostic Coverage DC = 0 %

Origin of values

The stated failure rates are the result of an FMEDA with tailored failure rates for the design and manufacturing process.

Furthermore the results have been verified by qualification tests and field-feedback data of the last 5 years.

Failure rates include failures that occur at a random point in time and are due to degradation mechanisms such as ageing.

The stated failure rates do not release the end-user from collecting and evaluating application-specific reliability data.

Systematic Capability

The development and manufacturing process and the functional safety management applied by the manufacturer in the relevant lifecycle phases of the product have been audited and assessed as suitable for the manufacturing of products for use in applications with a maximum Safety Integrity Level of 3 (SC 3).

Periodic Tests and Maintenance

The given values require periodic tests and maintenance as described in the Safety Manual.

The operator is responsible for the consideration of specific external conditions (e.g. ensuring of required quality of media, max. temperature, time of impact), and adequate test cycles.

TÜV Rheinland Industrie Service GmbH, Am Grauen Stein, 51105 Köln / Germany

² assumed Proof Test Interval T₁ = 1 year

 $^{^3}$ assumed Proof Test Interval T_1 = 1 year and β_{1002} = 10 %

⁴ The solenoid valve manifold of type 3968 is a combination of the control valves 3756 and the pilot valves 3964. The failure rates must be determined for each individual application from the given characteristic values of the single components.

